



**NATIONAL
PARK
SERVICE**


1984 BOOT PROGRAM

R & R UNIFORMS, INC.



3040 MEN'S CORDOVAN

- Cordura & full grain leather
- Goretex Fabric (dropped sock liner)
- Cordura padded collar
- Thinsulate Insulation
- Vibram sole

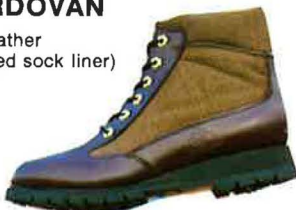

5060 MEN'S CORDOVAN

- 6" boot
- Full grain leather upper
- Rocky support system
- Lightweight Vibram Sole
- Thinsulate Insulation



4040 WOMEN'S CORDOVAN

5060ST STEEL TOE (MEN'S ONLY) 6060 WOMEN'S CORDOVAN

MALE SHOE SIZES
(X Indicates Sizes Available)

WIDTH	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12	13
N													
M													
W													

FEMALE SHOE SIZES
(X Indicates Sizes Available)

WIDTH	5	5½	6	6½	7	7½	8	8½	9	9½	10
N											
M											
W											

PLEASE DO NOT SEND A FOOT TRACING. GO TO A SHOE STORE AND HAVE A PROFESSIONAL FOOT MEASUREMENT (WITH A BRANNOCK DEVICE).

RECOMMENDED CARE FOR ALL FOOTWEAR OF THE PARK SERVICE

#3040 and #4040, boots with laminations of GORE-TEX film: NEVER SPRAY, or put heavy coats of waxes or silicones directly on the uppers where the CORDURA nylon is. Start out with the new boots by applying a fresh light coat of your Cordovan wax shoe polish for a gloss finish and for water repellance.

- **To clean:** Simply put the entire boot under a faucet of warm water and completely rinse until the water rinses clean. For heavy stains on the CORDURA, use a very small amount of naptha on an old tooth brush and scrub the surface carefully trying not to soak the nylon totally. Then wash the boots in bucket or tub of warm water and solution of Ivory Snow Flakes or other very light detergent. This is very important as so not to damage the lamination of very sensitive GORE-TEX FILM. The insides of the boots may be rinsed as well in the warm water.

#5060, #5060ST, and #6060, the all leather boots should be taken care of first by applying a fresh light coat of your Cordovan wax shoe polish. A couple of times a

year you should apply a generous coat of Liquid Silicone and let dry over night. Then apply your Cordovan wax shoe polish for good looking finish.

- **To clean:** These boots can be rinsed in a tub of warm water also, to clean the salts from perspiration on the inside. To clean the leather use several light coats of LEXOL to deep clean the leather with a soft cloth, then wipe clean again with the cloth. Then apply your Cordovan wax shoe polish.

THE WELTS: On all the Parks Service boots, you can use WELT SEAL® to seal against water leakage around the welt area carefully and neatly to keep the boots always looking good.

THE SOLES: These can be rinsed with water and scrubbed with a soft brush to clean the sides and the lugs.

DIRECT ALL TECHNICAL QUESTIONS TO
WM. BROOKS SHOE CO. (800) 848-9452.

Rocky Boots

